


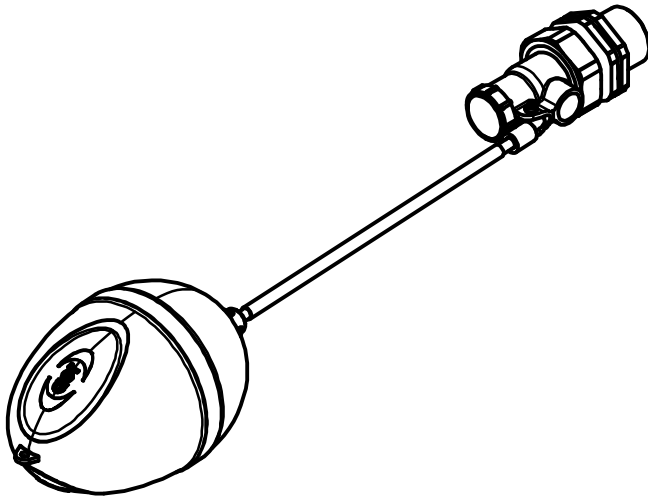


FLOATING VALVE

Installation Instruction

Petunjuk Pemasangan

PRODUCT INSTALLATION


Please make sure that your chosen product is suitable for your needs. The diameter of the pipe depends on valve body's diameter (1/2", 3/4" and 1").

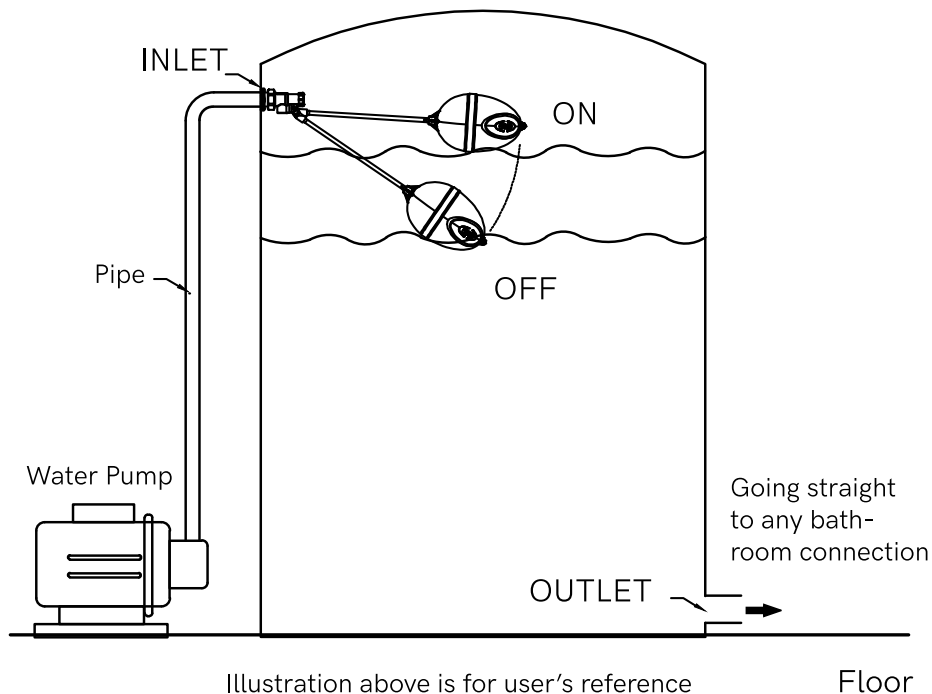

* This installation instruction is suitable for floating valve with diameter 1/2", 3/4" and 1"

PEMASANGAN PRODUK

Harap pastikan bahwa produk yang anda pilih sesuai dengan kebutuhan anda. Diameter dari pipa yang digunakan tergantung dari ukuran diameter dari body katup (1/2", 3/4" dan 1").

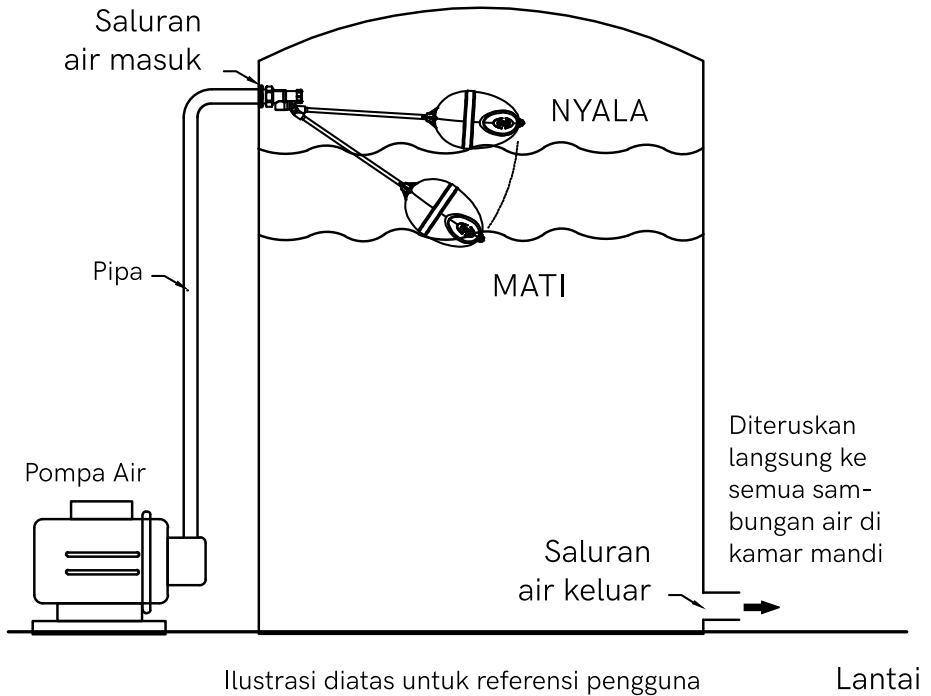

* Instruksi pemasangan ini dapat diaplikasikan untuk floating valve dengan diameter 1/2", 3/4" dan 1"



www.aer.co.id