


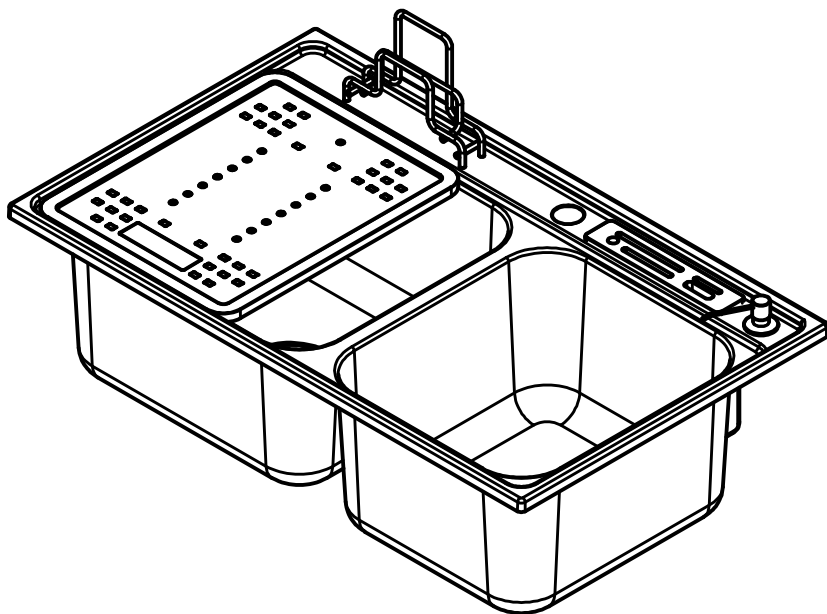

KS 2 - 01

Installation Instruction


Petunjuk Instalasi

INSTALLATION INSTRUCTION


ACCESSORIES CHECKING

LIST OF THE STANDARD ACCESSORIES:

Please double-check the accessory list here in after and contact our company or our distributor for any unconformity.

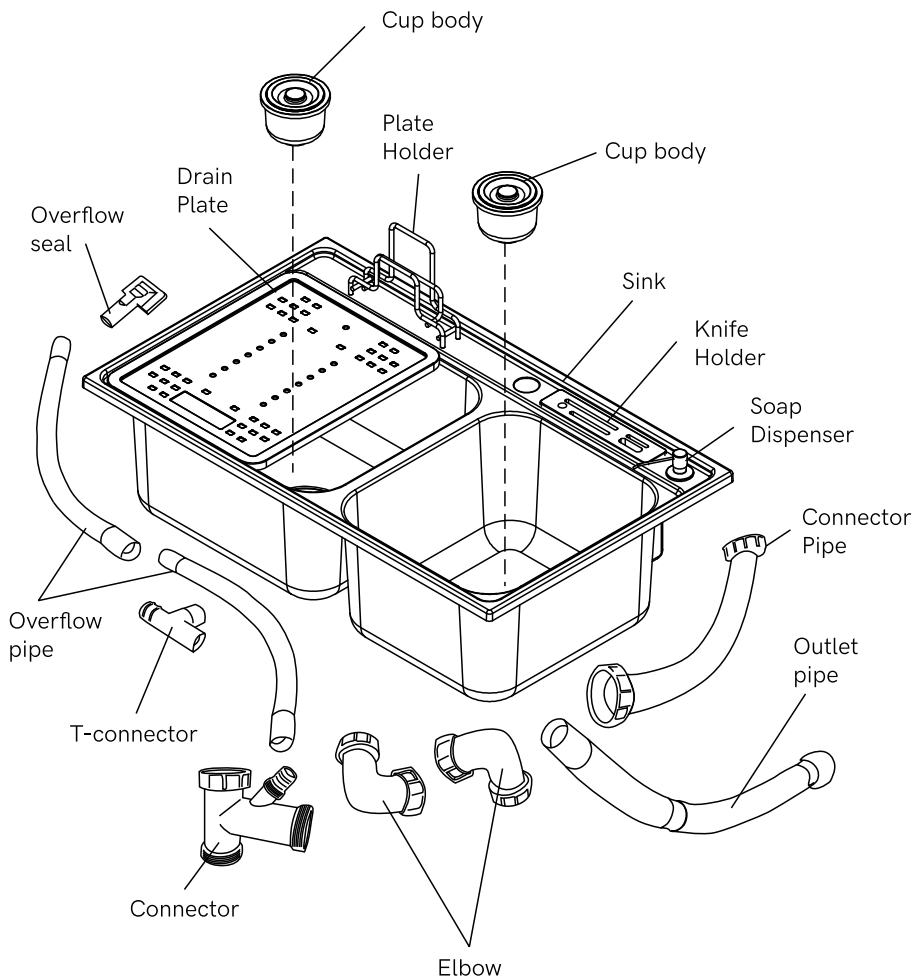


Bill of Material

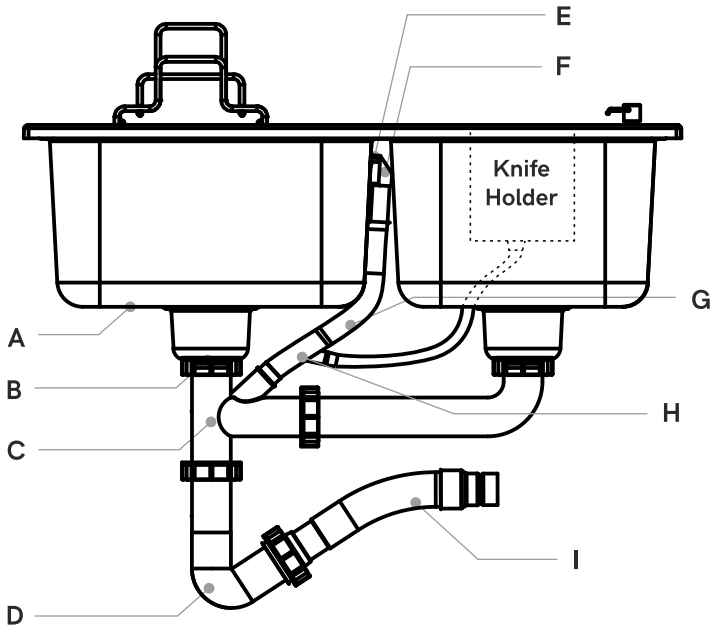


- A. SINK
- B. CUP BODY
- C. CONNECTOR
- D. ELBOW
- E. OVERFLOW SEAL
- F. OVERFLOW HEAD
- G. OVERFLOW PIPE
- H. T-CONNECTOR
- I. OUTLET PIPE


■ INSTALLATION STEPS

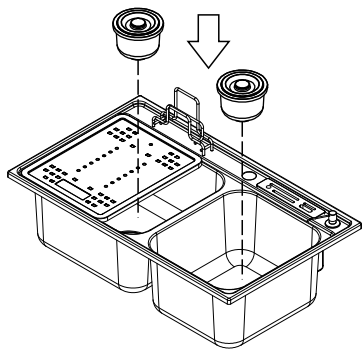

1. Put in and tighten the cup body to sink.

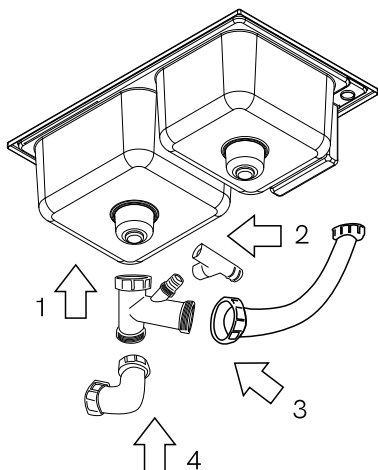

2. 1. Put in and tighten the connector to cup body.
2. Put in and tighten the T-connector.
3. Put in and tighten the connector pipe to another cup body.
4. Put in and tighten the elbows.

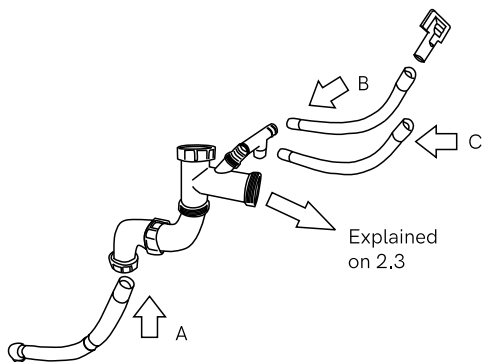


3. A. Put in and tighten the outlet pipe to the elbows.
B. Put in and tighten the overflow pipe to the T-connector, and connect it to the overflow seal that placed in the side of the sink.
C. Put in and tighten the overflow pipe to the T-connector, and connect it to the knife holder flow.

PETUNJUK PEMASANGAN


■ PENGECEKAN AKSESORIS

DAFTAR AKSESORIS STANDAR:

Harap lakukan pengecekan ulang terhadap kesesuaian aksesoris dengan daftar yang ada, jika terjadi ketidaksesuaian silakan hubungi kantor atau distributor kami.

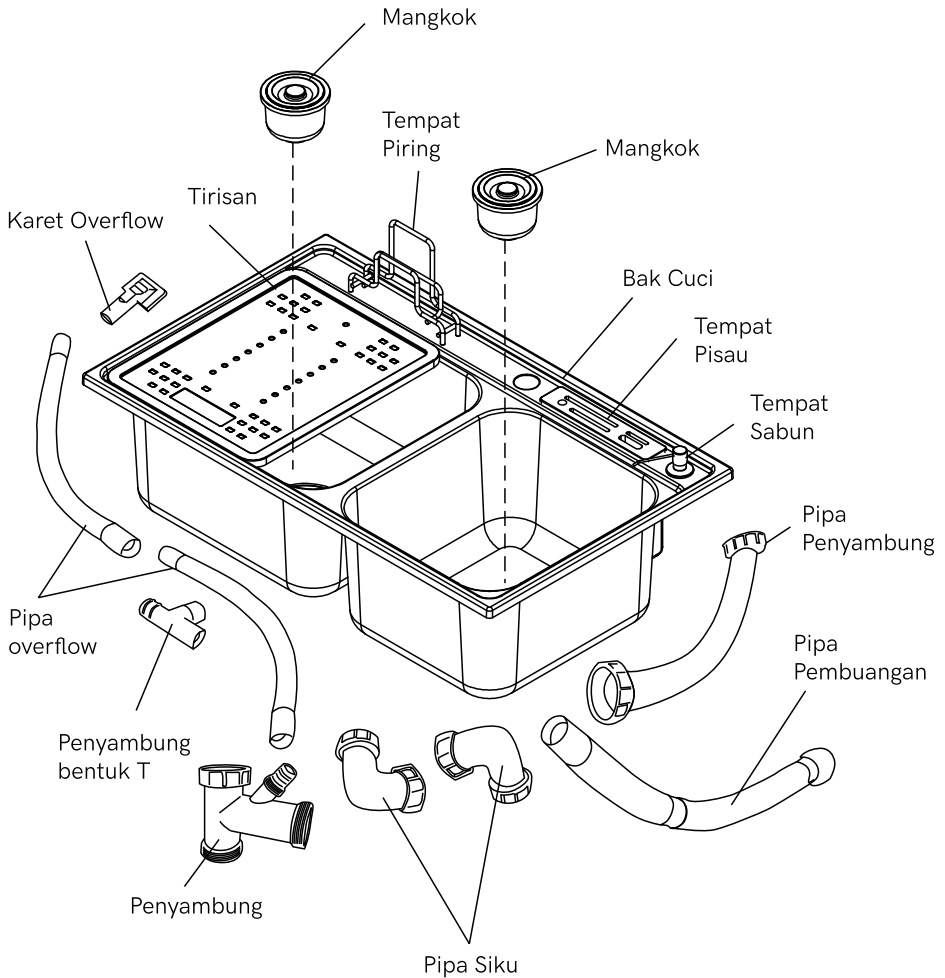


Daftar Bahan

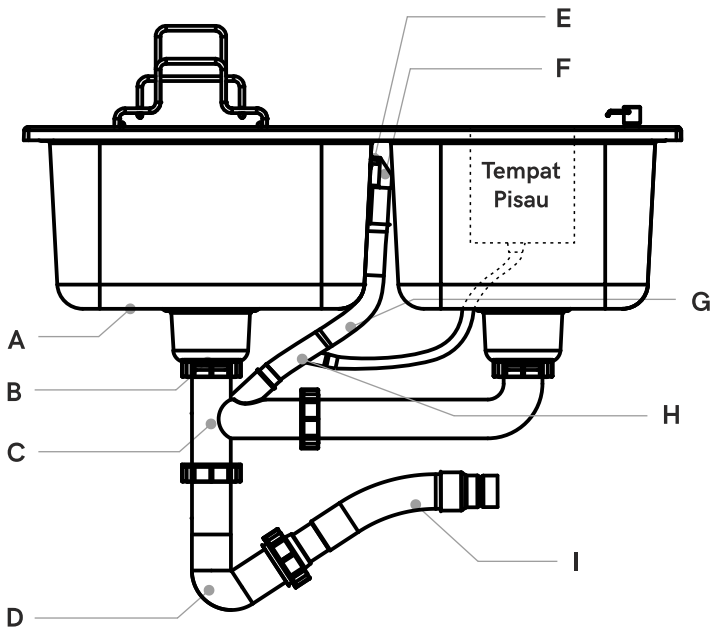


-
- A. BAK CUCI
 - B. MANGKOK
 - C. PIPA PENYAMBUNG
 - D. PIPA SIKU
 - E. KARET OVERFLOW
 - F. KEPALA OVERFLOW
 - G. PIPA OVERFLOW
 - H. PENYAMBUNG BENTUK T
 - I. PIPA PEMBUANGAN


■ LANGKAH-LANGKAH PEMASANGAN

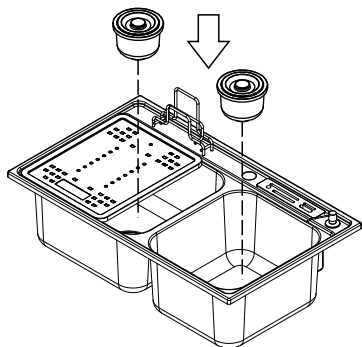

1. Masukkan dan kencangkan mangkok ke bak cuci.

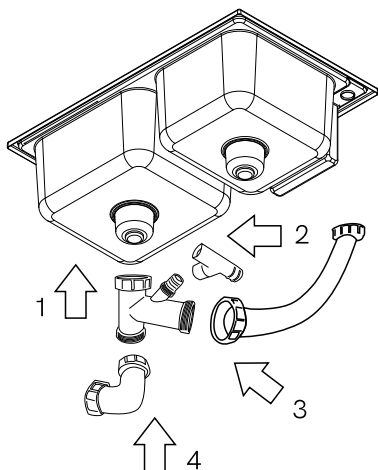

2. 1. Masukkan dan kencangkan pipa penyambung ke mangkok bak cuci.
2. Masukkan dan kencangkan pipa penyambung bentuk T ke pipa penyambung.
3. Masukkan dan kencangkan pipa penyambung ke mangkok bak cuci lainnya.
4. Masukkan dan kencangkan pipa siku ke pipa penyambung.

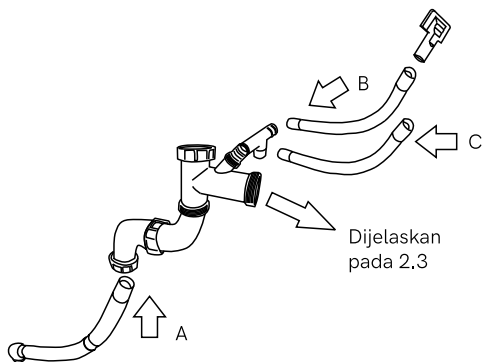

3. A. Masukkan dan kencangkan pipa pembuangan ke pipa siku.
B. Masukkan dan kencangkan pipa overflow ke salah satu pipa penyambung bentuk T, kemudian sambungkan ke karet overflow yang terletak di sisi samping bak cuci.
C. Masukkan dan kencangkan pipa overflow ke salah satu pipa penyambung bentuk T lainnya, kemudian sambungkan ke lubang tempat pisau.



www.aer.co.id