

UNDER COUNTER WASH BASIN

Installation Instruction


Petunjuk Pemasangan

Installation Guide

CAUTION

1. Risk of personal injury. Product can break, chip, and cause injury if handled carelessly. Get help lifting the sink.
2. When possible, cut the hole in the counter top before installing the counter top.
3. Do not use plumbers putty, as plumbers putty will stain natural stone. Use only clear, 100% silicone sealant for this installation.


RELATIVE TOOLS



Safety goggles



Pencil



Scissors



Hand Drills




Rag




Sealant

INSTALLATION STEPS

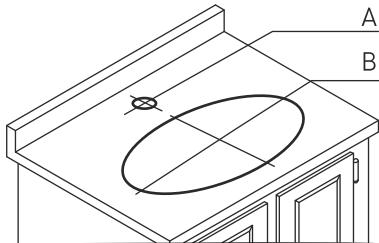


1. Make sure the diameter of A is 35 mm, and the center of A is at least 55 mm to the water bar. The diameter of B should be adjusted to the size of washbasin.

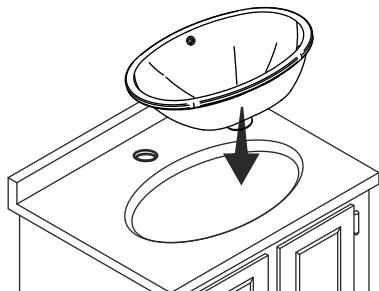


2. Position the sink in the cutout. Adjust the opening to fit. Remove the basin.


* This installation instruction is suitable for UCW 3R and UCW 40

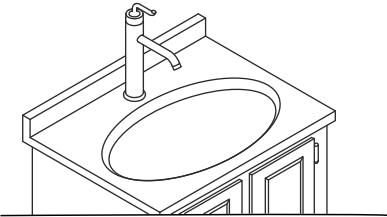


3. Install the faucet according to the faucet installation instructions.

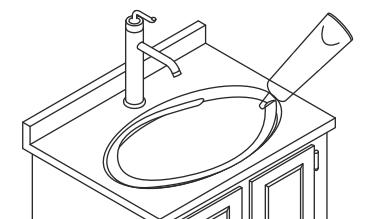


4. Apply clear, 100% silicone sealant around the cutout.

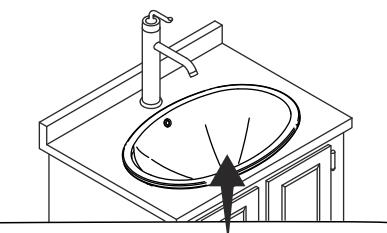

5. Position the sink in the cutout from the bottom. Wipe away excess sealant.

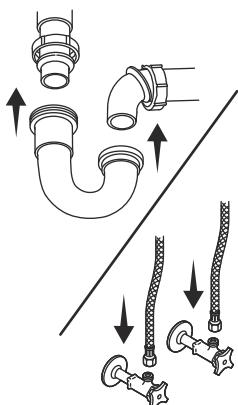

6. Complete the faucet and drain connections.

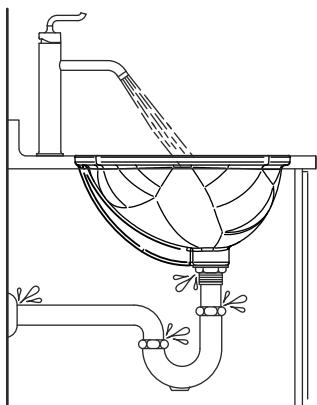

7. Run the water and check for leaks.

■ Cleaning & Maintenance



To keep the product clean & shining, follow the steps as below:




- o Flush with clean water & dry with soft cloth only.
- o If any dirt, clean with soft liquid or transparent glass detergent.
- o Do not use any scrubbing detergent, polisher, sane-cloth, paper tissue or scraper.
- o Do not use acid detergent, indissolvable grain-like detergent or soap.

Petunjuk Pemasangan

PERINGATAN

1. Resiko cedera : Produk bisa rusak, pecah dan menyebabkan cedera, apabila pemasangan tidak dilakukan dengan tepat.
2. Apabila memungkinkan, buat lubang pada meja sebelum pemasangan wastafel.
3. Jangan menggunakan dempul, karena penggunaan dempul akan meninggalkan noda pada wastafel. Gunakan lem silikon yang bening untuk pemasangan wastafel.

ALAT PENDUKUNG

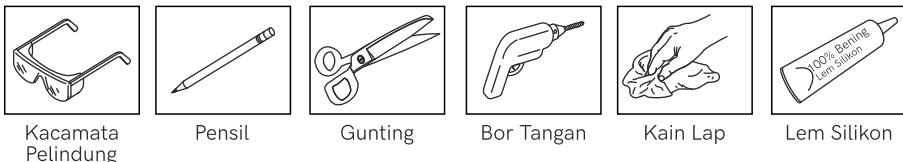

Kacamata
Pelindung

Pensil


Gunting

Bor Tangan


Kain Lap

Lem Silikon

LANGKAH-LANGKAH PEMASANGAN

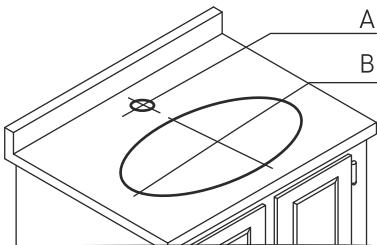


1. Pastikan ukuran diameter A adalah 35 mm dan pastikan jarak tengah dari A ke palang air minimal 55 mm. Ukuran diameter B disesuaikan dengan ukuran bibir wastafel.

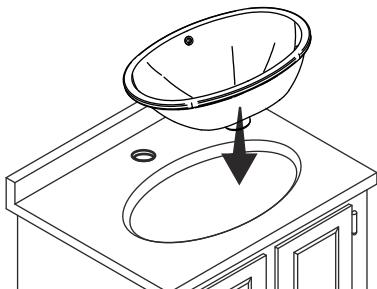


2. Sesuaikan posisi wastafel pada meja yang telah dilubangi, setelah itu lepas kembali wastafel.


* Instruksi pemasangan ini dapat diaplikasikan untuk UCW 3R dan UCW 4O

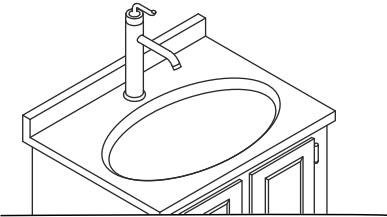


3. Pasang kran sesuai dengan petunjuk pemasangan kran.

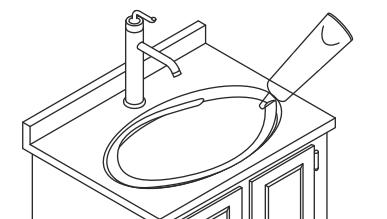


4. Berikan lem silikon bening pada bagian bawah dalam pinggiran lubang untuk wastafel pada meja.

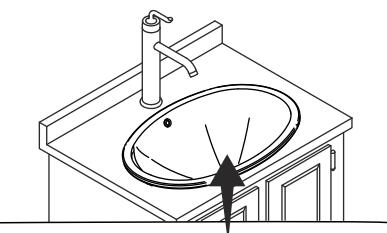

5. Pasang wastafel pada bagian yang telah diberi lem, dipasang dari bawah. Bersihkan sisa lem yang berlebih.

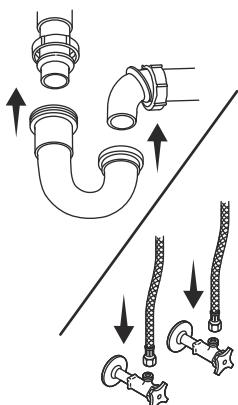

6. Selesaikan pemasangan kran dan siphon.

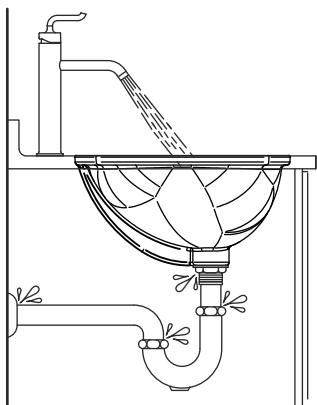

7. Nyalakan air dan cek apakah ada kebocoran.

■ Pembersihan dan Perawatan



Untuk menjaga produk tetap bersih dan mengkilap, ikuti langkah-langkah di bawah ini.



- o Siram dengan air bersih dan keringkan dengan kain lap yang lembut.
- o Jika terdapat kotoran, bersihkan dengan cairan yang tidak keras atau dengan deterjen kaca transparan.
- o Jangan menggunakan deterjen gosok, penggosok, kertas tisu, atau pengikis/pengikir.
- o Jangan menggunakan butiran dengan zat kimia yang sulit larut seperti deterjen dan sabun.



www.aer.co.id